


Leading edge

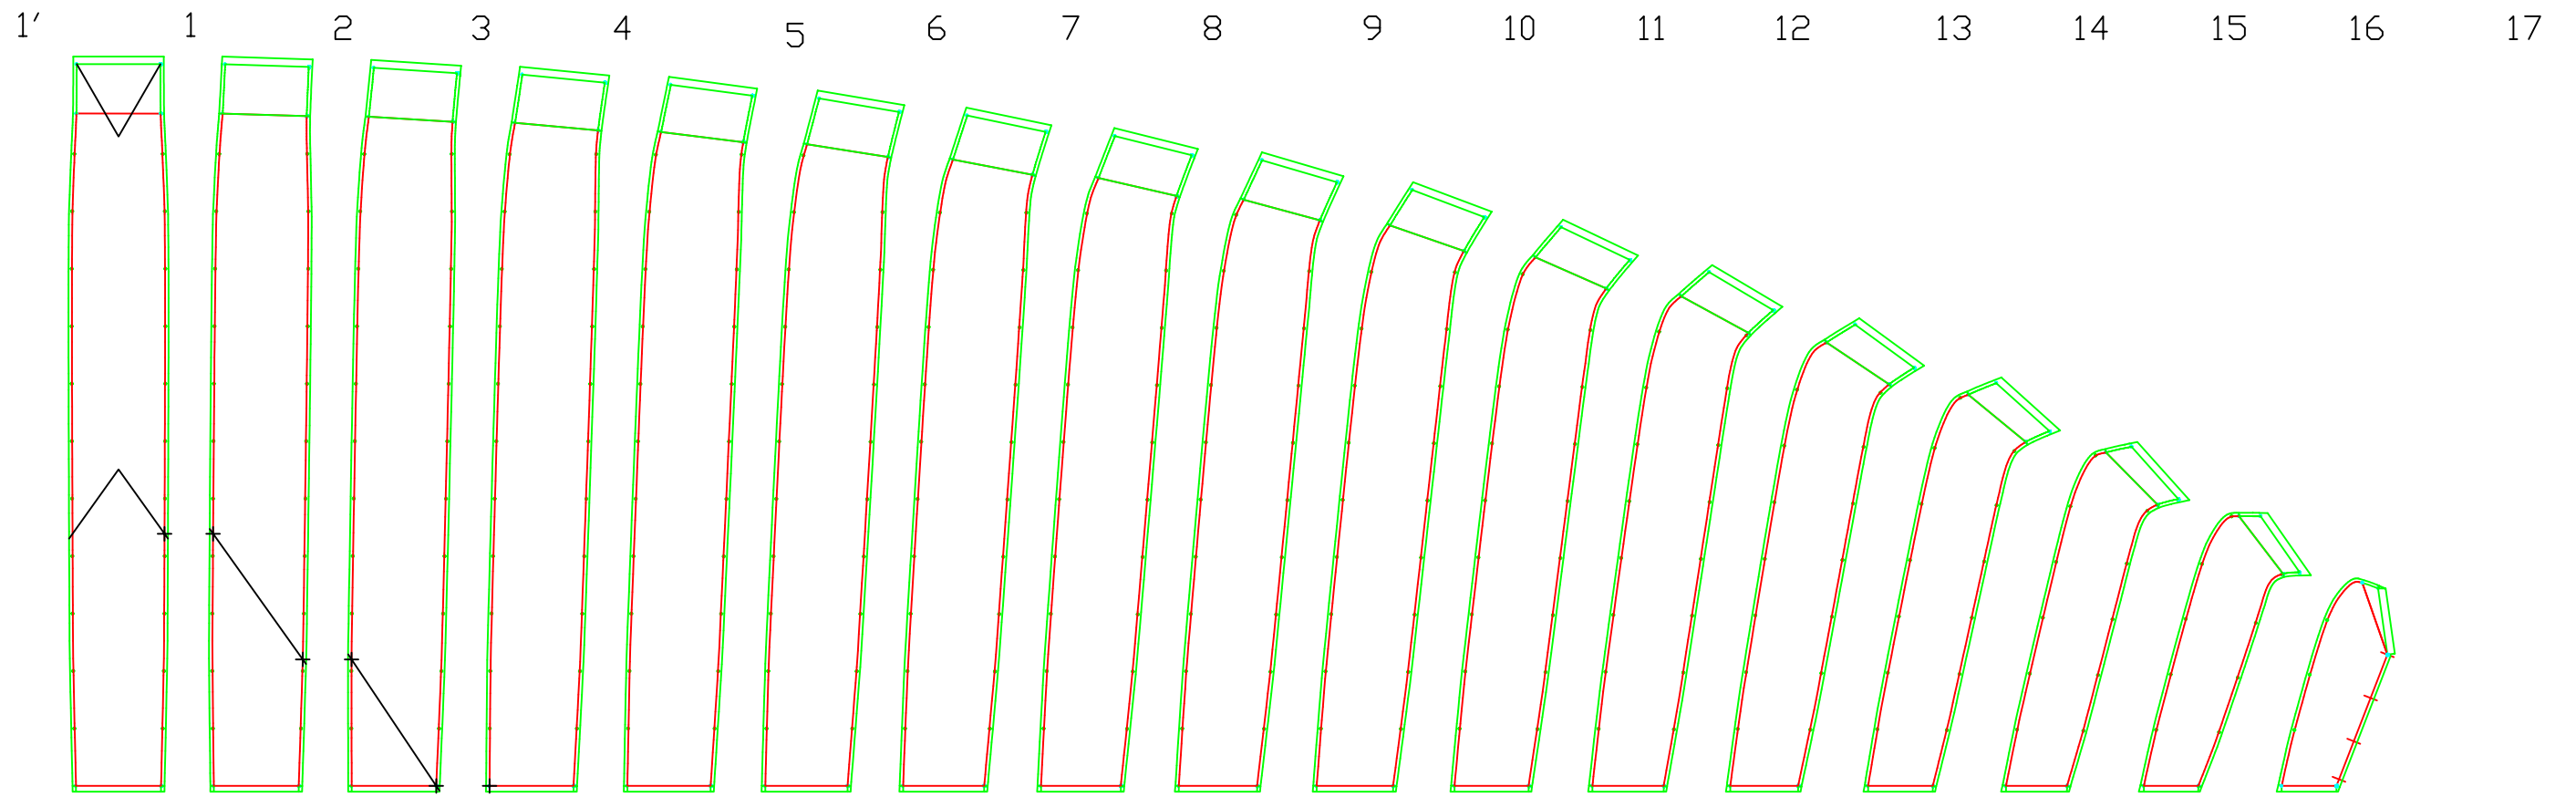


Trailing edge

Sewing allowances:
 15 mm (lateral)
 33 mm leading edge
 25 mm trailing edge

Control points (green), each 25 cm
 Cyan points = virtual inlet (closed)
 Control points at 1.5 mm from sewing line

Use A4 (or A3) sheet for easy plotting:

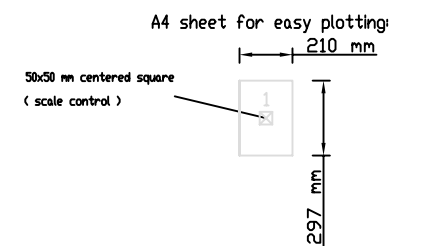

3. EXTRADOS PANELS (for printer or plotter)